



## Thule 754 rapid system gutterless feet - Fitting locks



Empty contents of foot pack.  
(4 x feet, 4 x allen keys, 4 x locks + keys)



Place the end of the allen key in the centre of the plastic lock plug.



Push down until you hear a 'click'.



The lock plug should drop into the foot.



Lift the foot cover.



Remove the detached lock plug and discard.



Close the foot cover.



Make sure the key is fully inserted into the lock barrel. This will leave one 'tooth' sticking out.



This leaflet has been produced by John Jordan Limited and is intended to supplement the manufacturer's instructions supplied. Please always follow the manufacturer's instructions. This advice is offered on the understanding that John Jordan Limited will not accept responsibility for any errors or omissions, or for any damage or injury incurred by choosing to follow any additional advice contained in this leaflet. Please always follow the manufacturer's instructions!

© These pictures and words are the copyright of John Jordan Limited trading as The Roof Box Company, all rights reserved.

[help@roofbox.co.uk](mailto:help@roofbox.co.uk)  
01539 621884



## Thule 754 rapid system gutterless feet - Fitting locks

9




Place the lock barrel at a 45 degree angle into the housing.

10



Push down into the housing until the tooth retracts and the lock barrel sits slightly recessed in the cover.

11

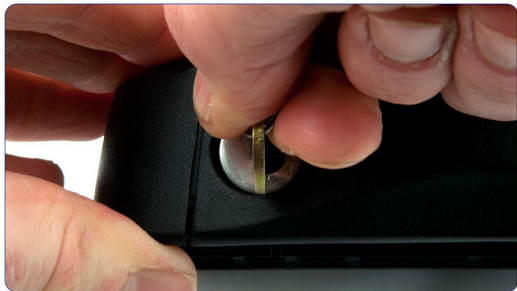

Turn the lock barrel 45 degrees anti clockwise.

12



Remove the key and repeat for each foot.