



## Atera STRADA DL - clamping handle lock removal and refit





Place the carrier on a flat surface.





Unlock the carrier.





Press and hold the trigger. lift the clamping handle to the vertical position and let go of the trigger.





You will need a standard sized paper clip. Bend one end as shown above.






On top of the clamping handle, there is a small pre drilled hole. This accesses the lock barrel. Make sure the key is in the vertical position.





Carefully insert the straightened paper clip into the access hole and push down. Keeping the paper clip pushed down, slowly retract the lock barrel.



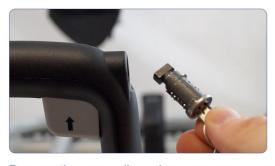

Remove the paper clip and you can now remove the lock.





To refit the lock - you will notice one tooth on the barrel is visible. This tooth MUST be facing upwards. Have a flat head screw driver to hand.



## Atera STRADA DL - clamping handle lock removal and refit






Making sure that the key is in the vertical position and the visible tooth is facing upwards, press this tooth down with the screw driver.





Remove the screw driver and push the lock barrel fully into the clamping handle.



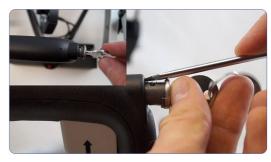

Keeping the tooth pressed down, push the lock barrel into the clamping handle just over halfway.





Once the lock barrel is fully inserted, the tooth will click back into place holding the lock secure.





Press the trigger and push the clamping handle down to the horizontal position, releasing the trigger after 45 degrees.





Lock the clamping handle and remove the keys.





The carrier is now ready to use.